


FIBER OPTIC VIEWING SCOPE KIT

OPERATION INSTRUCTIONS

BATTERY REPLACEMENT

Use two AA batteries to properly power your fiber scope

- Remove the battery housing cover near the viewing end of the scope body, sliding it to the direction of the arrow as show below.
- Insert batteries and put back the cover.

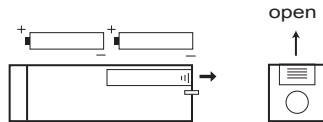

IMPORTANT INFORMATION:

FC, ST and SC connector ferrule lengths vary slightly. If you have aligned your scope to accept the SC connector, DO NOT fully seat the ST version for inspection. If you have aligned your scope to accept the ST version, it may be necessary to re-align it to accept SC connectors.


OPERATION

Using the 200X adjustable scope: The 200X adjustable magnifier is configured with a field aligning aluminum head. (See Field Alignment Section)


When using LC-type optical fiber connectors, please replace the corresponding connector holders.

To view the ferrule end of an FC or ST or SC fiber connector, slide the ferrule into the inspection port until it bottoms-out. On SC type connectors, it may be necessary to apply pressure to the back strain relief boot to ensure the ferrule end meets the minimum depth-of-field needed for proper viewing.

- Viewing the image can be accomplished by focusing with the thumb-wheel adjustment knob. You may first want to switch on the internal LED light source.

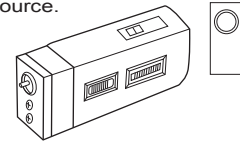

Inspection Examples:

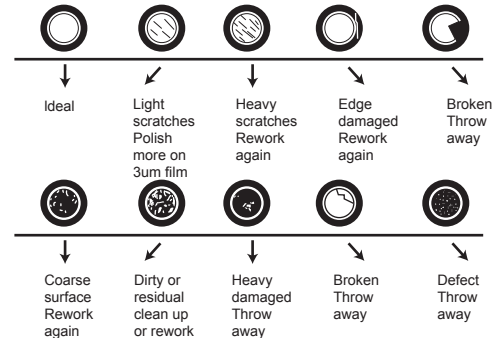

Appendix:

LC connector.....1pc

Nylon zipper bag.....1pc

FIELD ALIGNMENT OF ALUMINUM HEAD

Tools needed to perform aligning adjustment:

- Small electronics screwdriver.

Adjustment procedure:


- Insert connector in inspection port.
- Loosen screws on top of the aluminum plate head piece.
- Align image and hold plate and clear lens together while tightening one of the two hold-down screws.
- Perform find adjustment by viewing image and placing thumb pressure on the side of the aluminum plate.

Note:

Be aware that image will move in the opposite direction that pressure is applied.

- Tighten the last screw when you are satisfied with the view.

Caution: Do not over-tighten screws.



CARE AND STORAGE

Store your fiber inspection scope in appropriate temperatures. Extreme temperatures can shorten the life of your instrument.

Dust and dirt can cause premature wear on your scope. Be sure to gently clean the scope with a lint free cloth after each use.

When not using your scope, be sure to store it in a protected case to avoid lens damage from sun, dust, dirt, or moisture.

Do not clean any portion of your scope with a harsh chemical or solvent. Use a dry (or) slightly dampened with alcohol, lint free cloth.

Caution: Always remove all epoxy from connector ferrules before inserting into scope.

REPAIRING AND RESTORATION OF A REJECTED FINISH

For any connector face exhibiting signs of dust, bacterial growth, epoxy, fluid, or contamination, use only an optic approved lint free cloth and 90% (or better) isopropyl alcohol.

- Place the lint free cloth on a cushioned consistent surface i.e. a polishing pad.
- Add a few drops of alcohol to one side of the cloth and buff the fiber end on the saturated cloth using moderate hand pressure for about 15 seconds.
- Move to a dry section of the lint free cloth and once again buff the fiber end using firm hand pressure.
- Inspect finish using the 200X scope with angle adapter and repeat steps 1 through 3 if necessary.

FOR SCRATCHED OR SLIGHTLY BLEMISHED SURFACES


- For distinct scratches or very slight core/cladding fractures use 1.0 to 1.5um DIAMOND lapping film.
- For light scratches, surface blemishes, undercut, or epoxy fold-over, first use standard acetate 1um lapping film followed by 0.5 micron DIAMOND lapping film.

可調式200X光纖顯微放大鏡

使用說明

電池需求


請依圖示裝入兩個三號電池(AA)

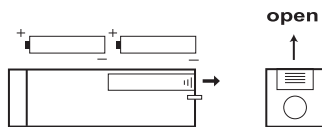


使用步驟

• 200倍可調式放大鏡

1. 將製作好的SC、FC或ST型的光纖接頭插入檢視孔內，為了取得清楚及正確的檢視結果，接頭需深入至底部。檢視不同接頭時，需重新調整焦距。使用LC型光纖接頭時請更換相應接頭固定座。
2. 打開放大鏡內的LED燈開關。
3. 轉動焦距調整鈕以使得取得最清晰的影像。

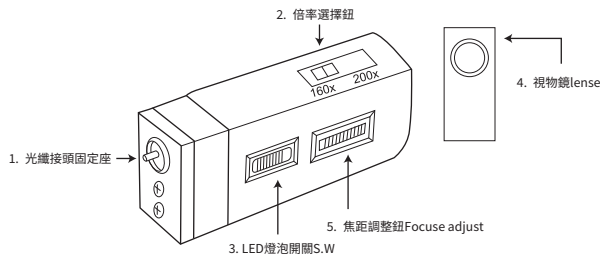

檢視結果判讀:

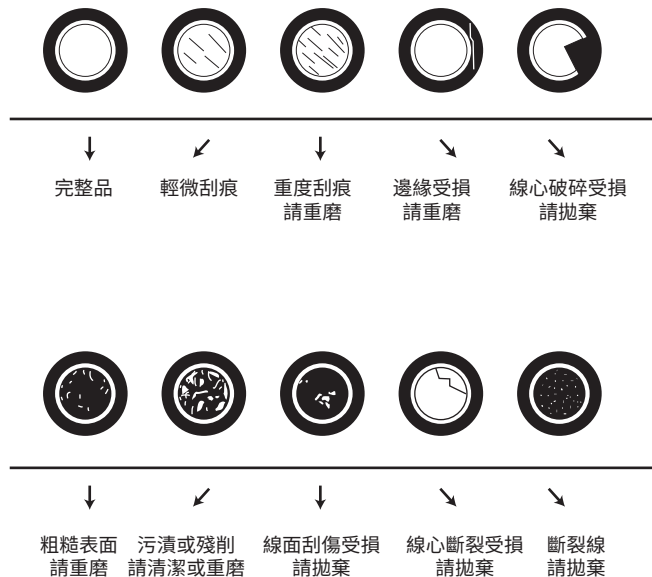

產品說明書


附件：

LC接頭固定座.....1pc

便攜包.....1pc

鋁製插孔的對齊調整步驟

1. 工具需求-小型的螺絲起子。
2. 將接頭插入檢視孔
3. 將上方的鋁製蓋板的螺絲鬆開。
4. 對齊影像、鋁板及鏡面後，再鎖緊螺絲。



如何修復受損的光纖接頭

1. 光纖接頭表面髒污時，請用絨布沾酒精清潔後，再用乾絨布擦拭一次。
2. 若表面有明顯刮痕或斷裂時，請將**1.0-1.5um**的研磨紙置於玻璃板上進行鏡面研磨。如只是輕微刮痕則可先用**1um**後再用**0.5um**之研磨紙。

可調式 200X 光纖顯微放大鏡

8PK-MA009

