




TE-1201UB / TE-1401UB DC To AC Power Inverter

150W-USB 50Hz Modify Sine Wave

TE-1201UB: DC12V to AC220V~240V

TE-1401UB: DC24V to AC220V~240V

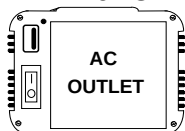

Instruction Manual

Please read user manual before use.

SPECIFICATION

Input voltage range : DC 10~15V (12V) // DC 20~30V (24V)

Input full load current: 15A (12V) // 8A (24V)

Standby input current : <0.4A (12V) // <0.3A (24V)

USB port : output 5VDC (500mA MAX.)

Output voltage (AC) : 220V~240V

Output waveform : modify sinewave

Output frequency : 50Hz

Continue output power : 150W

Peak output power : 450W

Efficiency : 90%

Battery low pre-alarm : $11 \pm 0.5V$ (12V) // $22 \pm 1V$ (24V)

Battery low shutdown : $10 \pm 0.5V$ (12V) // $20 \pm 1V$ (24V)

(Will shutdown 6 second later)

Thermal protection : $60 \pm 5^\circ C$ (microcontroller)

Overload protection : YES (microcontroller)

Output short protection : YES (microcontroller)

Battery ex. 12V / 24V protection : YES (microcontroller)

Battery polarity protection : YES (by fuse)

Fuse: 15A*1PC (12V) // 10A*1PC (24V)

Dimension (L*W*H) mm : 113*73*58

Weight : 450g

TROUBLESHOOTING


If the inverter does not appear to be functioning properly, there are several reasons why the inverter may not be responding.


- 1) Poor contact
 - *Cleaning contact parts thoroughly.
- 2) Receptacle has no power
 - *check fuse, replace damaged fuse.
 - *check receptacle wiring. repair if necessary
- 3) Fuse is blown
 - *The fuse is located inside the DC plug. Please replace fuse with a new equivalent value fuse.
- 4) Overload caused AC output reduce
 - *Reduce the wattage of loading to lower than 150 watts.
- 5) Thermal caused AC output reduce
 - *Under heavy loads for extended periods of time. The AC inverter will reduce output to prevent damage to excess heat. If this happened, please proceed as below:
 - (A) Switch off the power of this inverter.
 - (B) Decreases the load of this machine i. e. disconnect some of the appliances or wait until this inverter become cool.
 - (C) Switch on the power of this inverter.
- 6) Low-battery shutdown
 - *Recharge your battery and resume operation.

CAUTION


Always place the inverter in an environment which is:

- (A) well ventilated
- (B) not exposed to direct sunlight or heat source
- (C) out of reach from children
- (D) away from water/moisture, oil or grease
- (E) away from any flammable substance

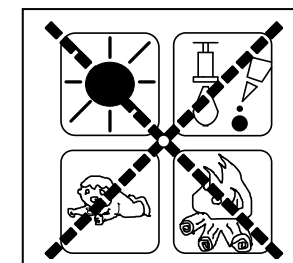


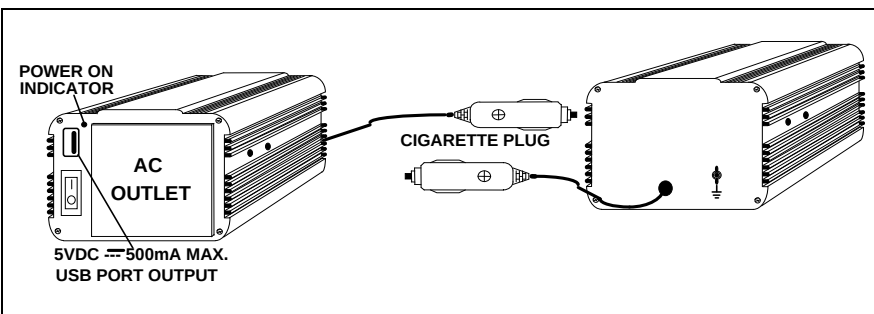

WHEN CONNECTED TO ANY APPLIANCE, BE SURE TO TURN ON INVERTER FIRST. AND THEN TURN ON THE POWER SWITCH OF THE APPLIANCE.

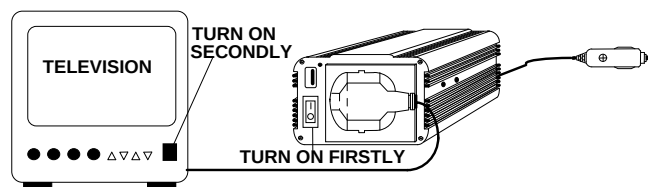


WHILE USING USB PORT: OUTPUT 5VDC (500mA MAX) FOR CHARGING, PLEASE TURN ON THE SWITCH OF THE INVERTER FIRST, THEN CONNECT THE USB WIRE TO THE ELECTRONIC APPLIANCE NEEDED TO BE CHARGED.

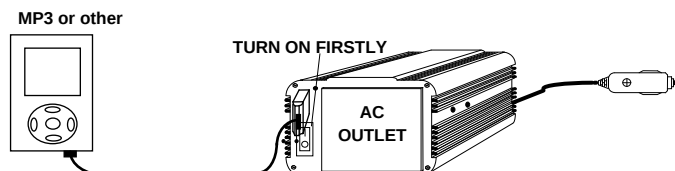


※WARNING※FLUORESCENT LAMP


DO NOT USE THIS DEVICE WITH FLUORESCENT LAMPS.

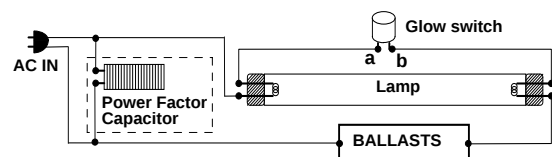


DURING OPERATION, WHEN THE POWER SWITCH IS ON, IF POWER ON INDICATOR IS NO LIGHTEDS. PLEASE CHECK THE FUSE IN THE CIGARETTE PLUG. IF THE FUSE IS SPOILT, FOR REPLACEMENT, USE THE SAME CURRENT FUSE.

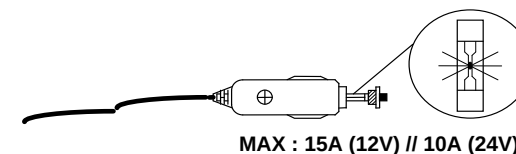

WHEN HEAR THE PRE-ALARM SOUND FOR LOW BATTERY, PLEASE RE-START THE CAR ENGINE TO MAKE IT WORK AGAIN.

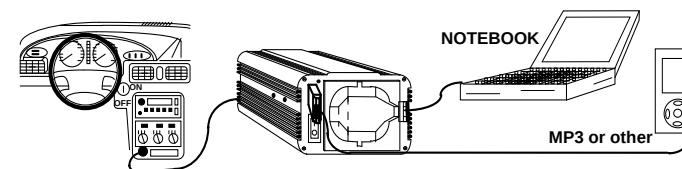

IF THE TOTAL WATTS OF ELECTRICAL APPLIANCES EXCEEDS THE OUTPUT CAPACITY OF INVERTER. OR AFTER OPERATING FOR A PERIOD OF TIME. IF THE TEMPERATURE OF THE INVERTER REACHES 60°C, THE INVERTER SHALL BE REDUCED AC OUTPUT BY THE PROTECTION CIRCUIT.

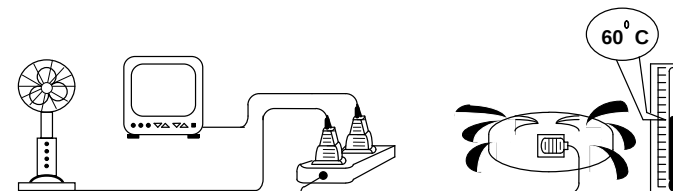

WARNING SIGNAL

Condition	Warning signal cycle	Shutdown signal cycle
Low battery alarm:	BI BI BI (pause)	BEE BEE BEE (pause)
Over heating alarm:	BI BI (pause)	BEE BEE (pause)
Over load alarm:	BI BI BI BI BI BI	Continuous tone
Note: BI is a short beep, and BEE is a longer beep.		